

MINI OVEN

INSTRUCTION MANUAL



IMPORTANT SAFEGUARDS

When using electrical appliances consideration should always be given to basic safety precautions including:-

1. Read all instructions.
2. Do not immerse the appliance or its plug or cord in water or other liquids.
3. Do not use if there is any visible damage to the appliance or supply cord.
4. Before using the oven for the first time, remove any paper and other material inside the oven such as protective cardboard, booklets, plastic bags, etc.
5. This appliance is not intended for use by children or infirm persons without supervision.
6. Do not let the cord hang over the edge of the table or work surface, or touch hot surfaces.
7. This oven has been designed to cook food. It must never be used for other purposes, modified or tampered with in any way.
8. Do not use the appliance as a heat source.
9. Before using for the first time, operate the oven empty with the thermostat at maximum for at least 15 minutes to eliminate the "new" smell and any smoke caused by the presence of protective substances applied to the elements before transport. During this operation, ventilate the room.
10. Do not use the appliance for other than its intended use.
11. Never place paper, cardboard or plastic inside the oven and never rest anything on top of the appliance (utensils, wire racks, other objects).
12. When in operation, the door and accessible external surfaces could become very hot. Always use the knobs, handles and buttons. Never touch metal parts or the glass. Use oven gloves if necessary. • This electrical appliance operates at high temperatures which could cause burns
13. Mini ovens should not be used near or below curtains and other combustible materials.
14. Do not block or cover the air vents at the rear of the appliance.
15. If food or other parts of the oven catch fire, never try and put out the flames with water. Close the door, unplug from the mains and smother the flames with a damp cloth.
16. Do not leave inflammable products near the oven or under the work surface where it is located.
17. This oven is not designed for built-in installation.
18. Do not move the appliance while in use

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance

Cleaning and user maintenance shall not be made by children without supervision unless they are older than 8 years age or supervised.

Keep the appliance and its cord out of reach children less than 8 years

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.

Children being supervised not to play with the appliance

If the cord is damaged , the appliance must not be used

The temperature of accessible surfaces may be high when the appliance is operating



This sign mean that the surfaces are liable to get hot during use the appliances are not intended to be operated by means of the external timer or seperate remote-controll system

The temperature of the door or outer surface may be high when the appliance is operating

IMPORTANT: when you have unpacked the appliance, make sure the door is undamaged and working correctly. The door contains glass and is therefore fragile. If it is visibly chipped, scored or scratched, it should be replaced.

While using, cleaning or moving the appliance, avoid slamming or knocking the door violently. Do not pour cold liquid onto the glass while the appliance is hot.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

PLEASE KEEP THESE INSTRUCTIONS

Connecting to Power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

Power for the appliance must be : 220 – 240 V AC / 50 – 60 Hz

WARNING - THIS APPLIANCE MUST BE EARTHED.

Before Use

1. Remove any packaging materials from the inside of the oven.
2. Wash the shelf and baking tray in warm sudsy water. Dry thoroughly.
3. Make sure that there is 50mm clear behind, above and on each side of the oven.
4. During the initial heating up period, traces of smoke may be visible. This is normal for newly manufactured electrical heating appliances and there should be no cause for alarm.
5. As this appliance operates slightly differently to a traditional oven, some adjustments to manufacturers cooking times and temperatures may be necessary to achieve the desired results.
6. Foil used to cover items during cooking should not be allowed to come into direct contact with the elements.
7. Food items that could bubble or bake out during cooking such as filled pies, pizzas etc., should be placed on a baking tray to prevent splashing onto the bottom element.

Using Your Oven

The Temperature Control is used to set the oven temperature.

Rotate it clockwise to the required temperature, and do not forget to return it to the MIN position when cooking is complete.

The Indicator Light is illuminated when the oven is switched on by rotary switch

↓ It is indicated for bottom heating element , when the switch turned to this sign , bottom heating element will be run

↑ It is indicated for top heating element , when the switch turned on to this sign , top heating element will be run

↕ It is indicated for top and bottom heating element , when the switch turned on to this sign Top and bottom heating element will be run

For close the oven turn the rotary switch to the  sign ,then it will go off

When the thermostate reach the required temprature , energy will be off. It will continiuous cycle on and off during cooking.



1. Defrosting

- Push on both up and down rezistances switches,
- Turn the Temperature Control Knob to 50°C.
- Place the baking tray with the food to be defrosted in the oven.
- Example of defrosting: 1 kg of meat, 80-90 minutes without turning it over.

2. Baking/Roasting

- Push on both up and down rezistances switches,
- Turn the Temperature Control Knob to the desired temperature.
- Preheat the oven until the Indicator Light goes off before placing the food in the oven.

EXAMPLE SCHEDULE

Program	Thermostat knob	Times	Comments and tips
Quiche 700 g	200°C	35-40 min.	Use the bake pan.
Chicken 1 kg	200°C	70-80 min.	Use the bake pan, turn after around 38 min.
Meatballs 650 g	200°C	45-50 min.	Use the bake pan, turn after around 20 min.
Roast potatoes 500 g	200°C	50-60 min.	Use the bake pan, mix twice.
Jam tarts 700 g	200°C	35-40 min.	Use a cake dish.
Strudel 1 kg	200°C	35-40 min.	Use the bake pan.
Margherita cakes 800 g	200°C	35-40 min.	Use a cake dish.
Macaroni "au gratin" 1 kg	200°C	25-30 min.	Use an ovenproof dish.
Lasagna 1 kg	200°C	25-30 min.	Use an ovenproof dish.
Pizza 500 g	200°C	30-35 min.	Use the bake pan.
Trout 500 g	180°C	30-35 min.	Use the bake pan, turn after 16 minutes.
Stuffed calamari 450 g	180°C	25-30 min.	Use an ovenproof dish, turn halfway through cooking.
Tomatoes "au gratin" 550 g	180°C	35-40 min.	Use the bake pan greased with oil and turn after 20 min.
Zucchini with tuna 750 g	180°C	35-40 min.	Use the bake pan; add oil, the tomatoes and water; turn the bake pan after 20 min.



Care and Cleaning

Switch off and remove the plug from the power supply, and allow to cool before cleaning.

Frequent cleaning prevents the formation of smoke and bad odors during cooking. Do not let fat accumulate inside the appliance.

CLEANING THE OVEN

Wipe with a damp cloth. Stubborn stains or burnt on residues should be removed using a damp cloth or foam based cleaner. DO NOT use harsh scourers or any type of caustic or ammonia oven cleaning solutions.

Note: If a major spillage occurs inside the oven compartment wipe clean with a damp cloth. DO NOT IMMERSE THE APPLIANCE IN LIQUID. Take care when cleaning around the thermostat and elements and avoid any sharp edges and corners.

OVEN SHELF AND TRAYS

Wash immediately after use in hot sudsy water to prevent grease accumulation.

OUTSIDE

Clean the outside of the oven with a non abrasive cleaner or wipe with a damp cloth and dry thoroughly.

Service

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Contact the dealer from whom you purchased your appliance.



ENVIRONMENTAL PROTECTION – DIRECTIVE 2002/96/EC

To protect our environment and human health, the disposal of electric and electronic goods is fulfilled in line with rules specific for the manufacturer and the client. So, as demonstrated with the symbol on the label or the package, your product must not be disposed of with unsorted municipal waste. The client may take it to the collection points of the municipality and provide it for recovery, recycling or usage in another product in accordance with the directive.

IMPORTER : KEKA'S OVEN PTY LTD. - EVA PAGES OLIVER

ADDRESS : 3 TOONGABBIE COURT KINGSLEY 6026

PERTH WESTERN AUSTRALIA

www.kekasoven.com